

# WT41N0 Series

# **EMC Configuration and Accessories Guide**

Designed to assist customers and partners with model and configuration guidance





## WT41N0 Series

CONFIGURATION & ACCESSORY GUIDES are available on The Source and PartnerCentral

- Also see <u>www.zebra.com/wt41n0</u> and the WT41N0 Configuration and Accessories Guide
- All WT41N0 series accessories are compatible and backward compatible including: cradles, holsters and cables.

Find Product Information in the EMC Product Portfolio on The Source and PartnerCentral





## **WT41N0 Series Configuration Matrix**

CONFIGURATION OPTIONS:	WT41N0	OPTION	DESCRIPTION
Touch Screen	WT41N0-TXXXXXX	Т	Touch
	WT41N0-NXXXXXX	N	Non-touch
	WT41N0-VXXXXXX	V	Voice-only/No Display
Kayaad Oyarlay	WT41N0-X1XXXXX	1	3 keys; voice device
Keypad Overlay	WT41N0-X2XXXXX	2	Double tap
Dotton	WT41N0-XXSXXXX	S	Standard
Battery	WT41N0-XXHXXXX	Н	High Capacity
OS Languago & Custom	WT41N0-XXXXXEX	Е	English
OS Language & Custom	WT41N0-XXXXXJX	J	Japanese

PRODUCT ID:	TOUCH SCREEN	KEYPAD OVERLAY	BATTERY
WT41N0-N2H27ER	Non-Touch	3 keys; voice device	High Capacity
WT41N0-N2S27ER	Non-Touch	3 keys; voice device	Standard
WT41N0-T2H27ER	Touch	3 keys; voice device	High Capacity
WT41N0-T2S27ER	Touch	3 keys; voice device	Standard
WT41N0-V1H27ER	Voice-only/ No Display	Double tap	High Capacity

#### All currently available WT41N0 configurations include the following features:

1. WAN Radio: None

2. Memory: 512MB RAM/2GB FLASH

3. OS: Windows Embedded Compact 7 (CE)

4. RoHS: RoHS Compliant



## WT41N0 Main Models



## WT41N0-T2S27ER Touch wearable with standard capacity battery



WT41N0-V1H27ER Voice only wearable

## **WT41N0**

- Processor: Dual Core OMAP 4 @ 1GHz
- Operative System: Microsoft Windows Embedded Compact CE 7.0
- **Display:** 2.8" Color QVGA (WT41N0 only)
- Compatible with:
  - 1D or 2D ring scanners (including RS419 latest 1D laser technology with adaptive scanning)
- IP54
- **Drop Spec:** 4' drop to concrete
- **Size**: 142 x 93 x 26 mm
- Weight:
  - 320 g (1x battery)
  - 370 g (2x battery)



## **WT41N0** Data capture methods

#### RS419 1D Laser

Ring scanner with HP engine, can also be used in freezer environments:

RS419-HP2000FSR Ring scanner, to be used with the WT41N0 worn on the wrist.

**RS419-HP2000FLR** Ring scanner, to be used with the WT41N0 worn on the hip.

#### 1D Laser





RS419-HP2000FSR
Ring scanner with cable
to wrist

RS419-HP2000FLR Ring scanner with cable to waist

## RS507 1D/2D Imager

**RS507 Configurations matrix:** 

OPTIONS	RS507-XX20000XXXX	DESCRIPTION
Imager Focus Method	RS507-IM20000xxx	SR focus imager
	RS507-DL20000xxx	DL focus imager
Battery	RS507-xx20000Sxxx	Standard Capacity Battery
	RS507-xx20000Exxx	Extended Capacity Battery
	RS507-xx20000Cxxx	Corded Adapter to WT41N0
Trigger	RS507-xx20000xTxx	Manual trigger
	RS507-xx20000xNxx	Without manual trigger for auto-triggering

## 1D/2D Imager







RS507-IM20000STWR Imager with trigger and standard capacity battery

# WT41N0 Accessories Guide





## **Step 1: Choose a charging method**



Single Slot Cradle: CRD4000-1000UR

Single slot USB cradle w/spare battery charger. Requires: Level VI Power Supply PWR-BGA12V50W0WW, DC Line Cord CBL-DC-388A1-01 and Country Specific 3 wire AC Line Cord.

## **Single Slot Cradle Kits:**

#### **CRD4000-110UES (US)**

**Includes:** Single Slot Cradle CRD4000-1000UR, USB Cable 25-68596-01R, Level VI Power Supply PWR-BGA12V50W0WW, DC Line Cord CBL-DC-388A1-01, and US AC Cord 23844-00-00R.

#### **CRD4000-110UES (INTL)**

**Includes:** Single Slot Cradle CRD4000-1000UR, USB Cable 25-68596-01R, Level VI Power Supply PWR-BGA12V50W0WW and DC Line Cord CBL-DC-388A1-01. Must purchase 3 wire AC Cord separately.

## **Additional Accessories for Single Slot Cradle**



#### 25-68596-01R

USB Cable for the single slot cradle



#### PWR-BGA12V50W0WW

Level VI AC/DC Power Supply (Brick, replacement for PWRS-14000-148R)

**AC Input:** 100-240V, 2.4A **DC Output:** 12V, 4.16A, 50W

Requires: DC line cord and Country specific

grounded AC line cord.



#### CBL-DC-388A1-01

DC Line Cord for running the single slot cradles or battery chargers from a single Level VI power supply PWR-BGA12V50W0WW, Level VI replacement for PWRS-14000-148R.



#### 23844-00-00R

US AC line cord, 7.5 feet long, grounded, three wire for power supplies.



#### CBL-DC-380A1-01

4-way DC cable to connect four 4-single slot cradles to Level VI power supply PWR-BGA12V108W0WW, Level VI replacement for PWRS-14000-241R



#### RDUYS08220007

Adapter to connect USB hub, keyboard, or mouse to the single-slot cradle.



The single slot cradle can charge a WT41N00 and has a USB port. It allows to charge a spare standard or extended battery.



## Step 1: Choose a charging method



#### 4 Slot Cradle:

#### CRD4001-4000ER

4 Slot Ethernet cradle. **Requires:** Level VI Power Supply PWR-BGA12V108W0WW, DC Cord CBL-DC-381A1-01 and Country Specific 3 wire AC Line Cord.

#### 4 Slot Cradle Kit:

### **CRD4001-411EES (INTL)**

**Includes:** 4 Slot Cradle CRD4001-4000ER, Level VI Power Supply PWR-BGA12V108W0WW and DC Cord CBL-DC-381A1-01. Must purchase 3 wire AC Cord separately.

## Additional Accessories for 4-slot Cradles



#### PWR-BGA12V108W0WW

Level VI AC/DC Power Supply (Brick, Replacement for PWRS-14000-241R)

**AC Input:** 100-240V, 2.8A **DC Output:** 12V, 9A, 108W

Requires: DC line cord and Country specific

grounded AC line cord.



#### CBL-DC-381A1-01

DC Line Cord for running multi-slot cradles from a single Level VI power supply PWR-BGA12V108W0WW, Level VI replacement for PWRS-14000-241R



#### 23844-00-00R

US AC line cord, 7.5 feet long, grounded, three wire for power supplies.



#### CBL-DC-379A1-01

DC "Y" Power cable, used to connect the 4 Slot cradle and a for slot battery charger SAC4000-4000CR to a single Level VI power supply PWR-BGA12V108W0WW, Level VI replacement for PWRS-14000-241R



#### 21-86630-01R

Wall Mounting Bracket, used for mounting the 4 slot cradle on a wall.



## Step 2: Choose battery / battery charging accessories

## **Spare Batteries**



Standard Lithium Ion battery, 2330 mAh



Extended Lithium Ion battery, 4600 mAh

## **Spare Battery Chargers**



#### SAC4000-4000CR

4-slot battery charger. **Requires:** Level VI Power Supply PWR-BGA12V50W0WW, DC Line Cord CBL-DC-388A1-01 and Country Specific 3 wire AC Line Cord.

#### **SAC4000-410CES (US)**

Includes: Battery charger SAC4000-4000CR, Level VI Power Supply PWR-BGA12V50W0WW, DC Line Cord CBL-DC-388A1-01, and US AC Cord 23844-00-00R

#### **SAC4000-411CES (INTL)**

Includes: Battery charger SAC4000-4000CR Level VI Power Supply PWR-BGA12V50W0WW and DC Line Cord CBL-DC-388A1-01. Must purchase 3 wire AC Cord separately.

#### **Accessories for battery chargers:**



#### PWR-BGA12V50W0WW

Level VI AC/DC Power Supply (Brick, replacement for PWRS-14000-148R)

**AC Input:** 100-240V, 2.4A **DC Output:** 12V, 4.16A, 50W

Requires: DC line cord and Country specific

grounded AC line cord.



#### CBL-DC-388A1-01

DC Line Cord for running the single slot cradles or battery chargers from a single Level VI power supply PWR-BGA12V50W0WW, Level VI replacement for PWRS-14000-148R.



#### 23844-00-00R

US AC line cord, 7.5 feet long, grounded, three wire for power supplies.



#### CBL-DC-380A1-01

4-way DC cable to connect four 4-single slot cradles to Level VI power supply PWR-BGA12V108W0WW, Level VI replacement for PWRS-14000-241R



#### CBL-DC-379A1-01

DC "Y" Power cable, used to connect the 4 Slot cradle and a for slot battery charger SAC4000-4000CR to a single Level VI power supply PWR-BGA12V108W0WW, Level VI replacement for PWRS-14000-241R



#### 21-86630-01R

Wall Mounting Bracket, used for mounting the 4 slot battery charger on a wall.



## **Step 3: Choose carrying accessories**

## **Wrist Mounting Accessories**



#### SG-WT4023020-05R

Wrist mount with regular length arm straps.

#### SG-WT4023020-06R

Wrist mount with long length arm straps.



#### SG-WT4023221-03R

Regular arm straps, includes 8" and 11" straps



 
SG-WT4027050-01R

Arm sleeves (pack of 5)



#### SG-WT4023221-04R

Long arm straps, includes 13" and 16" straps



#### SG-WT4023021-02R

Replacement pad

## **Hip Mounting Accessories**



#### SG-WT4021010-01R

Hip mount, to be used with the standard capacity battery.



#### SG-WT4026000-01R

Freezer pouch, for standard capacity battery, can be used wrist or hip mounted.



#### SG-WT4026000-20R

Freezer pouch, for extended capacity battery, can be used wrist or hip mounted.



#### 11-08062-02R

Belt for hip mount or freezer pouch.



## **Step 4: Choose audio accessories**



## **Headset Adapter Cables**



#### 25-114186-03R

Adapter cable with a coiled section fro WT41N0



Short adapter cable (4") for WT41N0 (wrist mounted)



Long adapter cable (19") for WT41N0 (hip mounted)

#### 25-129938-02R

Training "Y" cable to connect two headsets to one WT41N0

## Consumables



KT-126574-01R

Replacement ear pads foam, (5 pk)



KT-126579-01R

Replacement windsocks (5 pk)



KT-126580-01R

Replacement earpads leatherette (5 pk)



KT-126581-01R

Replacement headbands (5 pk)



KT-126582-01R

Replacement temple pads (5 pk)



## **Step 4: Choose audio accessories**



## **IHV Bluetooth Headsets**

**B250XT+** VXi Corp Bluetooth Wireless

Headset

Expressway II VXi Corp Bluetooth Wireless

Headset







## Step 5: Choose accessories for RS419 ring scanner



RS419-HP2000FLR Ring scanner for WT41 hip mounted.

RS419-HP2000FSR Ring scanner for WT41 wrist mounted.

## **RS419 Ring Scanner:**

#### **RS419-HP2000FLR**

Ring scanner to cable to waist-worn WT4X90 and WT41N0, with HP engine and freezer rating.

#### **RS419-HP2000FSR**

Ring scanner to cable to arm-worn WT4X90 and WT41N0, with HP engine and freezer rating.

# **Accessories for RS419 Ring Scanner**



SG-RS419-TRGAS-01R

Replacement trigger assembly for ring scanner.



21-93022-02R

Short replacement finger strap for ring scanner (6")



SG-RS419-FGSTP-01R

Long replacement finger strap for ring scanner (7.8")



## Step 6: Choose accessories for RS507 ring scanner



RS507-IM20000ENWR Imager without trigger and extended battery



RS507-IM20000STWR Imager with trigger and standard battery

### RS507 with manual trigger:

**RS507-IM20000STWR** Imager with SR focus, manual trigger and

standard capacity battery.

**RS507-IM20000CTWR** Imager with SR focus, manual trigger and

corded adapter to the WT4X terminal.

**RS507-IM200000TWR** Imager with SR focus and manual trigger.

Requires battery (not included)

RS507-DL20000STWR Imager with DL focus, manual trigger and

standard capacity battery.

**RS507-DL200000TWR** Imager with DL focus and manual trigger .

Requires battery (not included).

#### RS507 without manual trigger:

**RS507-IM20000SNWR** Imager with SR focus and standard capacity battery. Without trigger for auto-triggering.

**RS507-IM20000ENWR** Imager with SR focus and extended capacity battery. Without trigger for auto-triggering.

## **Spare Batteries**



KTBTRYRS50EAB00-01

Standard Lithium Ion battery, 970 mAh



KTBTRYRS50EAB02-01

Extended Lithium Ion battery, 1940 mAh

## **Charger Solutions**



#### **SAC5070-800CR**

8 Slot battery charger for standard and extended batteries. Includes: power supply and US AC Line Cord 50-16000-182R.

#### SAC5070-801CR

8 Slot battery charger for standard and extended batteries. Requires power supply PWRS-0102246H54R and 2 wire line cord.



## **Step 6: Choose accessories for RS507 ring scanner**

## **Replacement Straps and Buckles:**



#### KT-STRPT-RS507-10R

Velcro straps, for manual trigger configurations (10 pk)



#### KT-STRPN-RS507-10R

Velcro straps, for trigger-less configurations (10 pk)



#### **KT-STRP2-RS507-10R**

Elastic straps for trigger or trigger-less configurations (10 pk)



#### KT-BKL-RS507-10R

Buckles for velcro straps, use two for trigger-less configurations (10 pk)



#### KT-BKLT-RS507-10R

Buckles for elastic straps, used with trigger configurations only. (10 pk)



#### KT-BKLN-RS507-10R

Buckles for elastic straps, use two for trigger-less configurations. (10 pk)

## **Replacement Triggers:**



#### KT-CLMPT-RS507-01R

Replacement trigger swivel assembly.



#### KT-CLMPN-RS507-01R

Replacement strap holder, for trigger-less configurations.



#### KT-PAD-RS507-10R

Replacement comfort pads, to be used with manual trigger and trigger-less configurations (10 pk)

## **Corded Adapter:**



#### ADPTRWT-RS507-04R

Corded Adapter for the RS507. It uses instead of the battery for serial interface to the WT41N0.